

Flash code	Trouble code	WDS error value	Fault location	Probable cause
Continuous flashes	B1869	-	SRS warning lamp - open circuit/short circuit to earth	Wiring, instrument panel, SRS control module
Continuous flashes	B1870	-	SRS warning lamp - wiring short circuit to positive	Wiring, instrument panel
12	B1342	-	SRS control module	SRS control module
13	B1231	-	Longitudinal acceleration threshold exceeded - crash data memory full	SRS control module
14	B1921	-	Airbag diagnostic monitor - open circuit	SRS control module
15	C1414	-	SRS control module - incorrect model	SRS control module
16	B2290	24	Seat pressure sensor, passenger's side - sensing element fault	Wiring
16	B2290	26	Seat pressure sensor, passenger's side - communication error	Wiring
16	B2290	27	Seat pressure sensor, passenger's side	Seat pressure sensor
18	B1884	-	Passenger's airbag deactivation warning lamp	Wiring, passenger's airbag deactivation warning lamp, SRS control module
18	B1890	-	Passenger's airbag deactivation warning lamp - short circuit to positive	Wiring short circuit to positive, passenger's airbag deactivation warning lamp
19	B2293	20	Driver's airbag, stage 2 - low resistance	Driver's airbag, spiral cable, wiring
19	B2293	21	Driver's airbag, stage 2 - open circuit	Driver's airbag, spiral cable, wiring
19	B2293	22	Driver's airbag, stage 2 - short circuit to positive	Spiral cable, wiring
19	B2293	23	Driver's airbag, stage 2 - short circuit to earth	Driver's airbag, spiral cable, wiring
19	B2293	28	Driver's airbag, stage 1 - low resistance	Driver's airbag, spiral cable, wiring
19	B2293	29	Driver's airbag, stage 1 - open circuit	Driver's airbag, spiral cable, wiring
19	B2293	30	Driver's airbag, stage 1 - short circuit to positive	Spiral cable, wiring
19	B2293	31	Driver's airbag, stage 1 - short circuit to earth	Driver's airbag, spiral cable, wiring

21	B2293	16	Passenger's airbag, stage 2 - low resistance	Passenger's airbag, wiring
21	B2293	17	Passenger's airbag, stage 2 - open circuit	Passenger's airbag, wiring
21	B2293	18	Passenger's airbag, stage 2 - short circuit to positive	Wiring
21	B2293	19	Passenger's airbag, stage 2 - short circuit to earth	Passenger's airbag, wiring
21	B2293	24	Passenger's airbag, stage 1 - low resistance	Passenger's airbag, wiring
21	B2293	25	Passenger's airbag, stage 1 - open circuit	Passenger's airbag, wiring
21	B2293	26	Passenger's airbag, stage 1 - short circuit to positive	Wiring
21	B2293	27	Passenger's airbag, stage 1 - short circuit to earth	Passenger's airbag, wiring
22	B2295	28	Side airbag, driver's side - low resistance	Driver's airbag, wiring
22	B2295	29	Side airbag, driver's side - open circuit	Driver's airbag, wiring
22	B2295	30	Side airbag, driver's side - short circuit to earth	Driver's airbag, wiring
22	B2295	31	Side airbag, driver's side - short circuit to positive	Wiring
23	B2295	24	Side airbag, passenger's side - low resistance	Passenger's airbag, wiring
23	B2295	25	Side airbag, passenger's side - open circuit	Passenger's airbag, wiring
23	B2295	26	Side airbag, passenger's side - short circuit to earth	Passenger's airbag, wiring
23	B2295	27	Side airbag, passenger's side - short circuit to positive	Wiring
24	B2294	28	Inflatable curtain, driver's side - low resistance	Inflatable curtain, wiring
24	B2294	29	Inflatable curtain, driver's side - open circuit	Inflatable curtain, wiring
24	B2294	30	Inflatable curtain, driver's side - short circuit to earth	Inflatable curtain, wiring
24	B2294	31	Inflatable curtain, driver's side - short circuit to positive	Wiring
25	B2294	24	Inflatable curtain, passenger's side - low resistance	Inflatable curtain, wiring
25	B2294	25	Inflatable curtain, passenger's side - open circuit	Inflatable curtain, wiring
25	B2294	26	Inflatable curtain, passenger's side - short circuit to earth	Inflatable curtain, wiring
25	B2294	27	Inflatable curtain, passenger's side - short circuit to positive	Wiring
33	B2292	28	Pyrotechnic pretensioner, driver's side - short circuit to earth	Wiring, pyrotechnic pretensioner
33	B2292	29	Pyrotechnic pretensioner, driver's side - short circuit to positive	Wiring
33	B2292	30	Pyrotechnic pretensioner, driver's side - open circuit	Wiring, pyrotechnic pretensioner
33	B2292	31	Pyrotechnic pretensioner, driver's side - low resistance	Wiring, pyrotechnic pretensioner
34	B2292	24	Pyrotechnic pretensioner, passenger's side - short circuit to earth	Wiring, pyrotechnic pretensioner
34	B2292	25	Pyrotechnic pretensioner, passenger's side - short circuit to positive	Wiring, pyrotechnic pretensioner

34	B2292	26	Pyrotechnic pretensioner, passenger's side - open circuit	Wiring, pyrotechnic pretensioner
34	B2292	27	Pyrotechnic pretensioner, passenger's side - low resistance	Wiring, pyrotechnic pretensioner
42	B2296	18	Front crash sensor - internal fault	Front crash sensor
42	B2296	19	Front crash sensor - communication error	Wiring
43	B2296	30	Side crash sensor, driver's side - internal fault	Side crash sensor
43	B2296	31	Side crash sensor, driver's side - communication error	Wiring
44	B2296	28	Side crash sensor, passenger's side - internal fault	Side crash sensor
44	B2296	29	Side crash sensor, passenger's side - communication error	Wiring
49	C1947	-	Seat position sensor, driver's side - short circuit to earth or positive	Seat position sensor, wiring
49	C1948	-	Seat position sensor, driver's side - resistance	Seat position sensor, wiring
49	C1981	-	Seat position sensor, driver's side - open circuit	Seat position sensor, wiring
51	B2434	-	Seat belt buckle switch, driver's side - short circuit to earth	Seat belt buckle, wiring
51	B2435	-	Seat belt buckle switch, driver's side - resistance	Seat belt buckle, wiring
51	B2691	-	Seat belt buckle switch, driver's side - open circuit/short circuit to positive	Seat belt buckle, wiring
52	B2438	-	Seat belt buckle switch, passenger's side - short circuit to earth	Seat belt buckle, wiring
52	B2439	-	Seat belt buckle switch, passenger's side - resistance	Seat belt buckle, wiring
52	B2692	-	Seat belt buckle switch, passenger's side - open circuit/short circuit to positive	Seat belt buckle, wiring
53	B1891	-	SRS warning buzzer - short circuit to positive	SRS control module
53	B1892	-	SRS warning buzzer - circuit malfunction	SRS control module
54	B2477	-	SRS control module incorrectly programmed	SRS control module incorrectly programmed